


# EUTech Audio - voice recorder User manual

- Made in the EU audio recorder with strong magnet and 336 hours recording time
- User friendly Plug and Play
- Built in high sensitivity microphone
- One button design

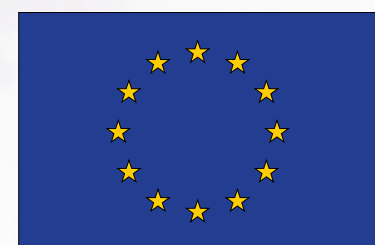

## MAIN FEATURES

- 2 operating modes - continuous and voice activation
- 8GB integrated memory
- Approximately 336 hours of battery life in continuous and voice activation modes
- Very strong integrated magnet
- 72 x 25 x 38 mm and weighs 65 grams
- Ultra sensitive integrated microphone - detects voice up to 10m
- Sound Detection Level: 60dB
- High quality recording mode: MP3 64Kbps
- Charging with the complimentary USB cable and 220V electricity adapter (not included)
- 2 x 3.7 volt 1,260 mAh rechargeable batteries (LI-polymer, Built-in Charger)
- ALC Function (Automatic Recording Level Control)
- Timestamp option available
- Battery life in standby mode: 350 days
- Battery charging time: approximately 20 hours
- Battery Indicator: LED Display (LED off while recording)
- USB 2.0
- Usage temperature: 0-40°
- Humidity: 20-80°
- Made in the EU

## TWO OPERATING MODES

- CONTINUOUS

When you move the switch to CONT you will notice that the LED light (placed close to the USB port) will light up red for about 5 seconds, and then will go out meaning the recording has started. If you wish to stop the recording move the switch to OFF otherwise the recording will continue until the battery runs out or until the memory is full. In continuous recording mode, each video file will be 5 hours long.

- VOX (voice activation)

By moving the switch to VOX you will select the voice activation recording mode. The red LED light will light up for about 5 seconds and afterward go off meaning the function is activated. The device will pick up and save voice data when it hears a sound. If no sound is detected for approximately 1 minute, the device will go into standby mode and activate again if the sound is heard.

## LED LIGHTS

- SOLID RED LED LIGHT

When the device is charging the solid red light is on. As soon as the device is fully charged the red light will start blinking. If the battery is completely drained it will take approximately 28h for the audio recorder to fully recharge.

- RED LIGHT LIGHTS UP FOR 5 SEC AND THEN GOES OFF

When selecting either CONT or VOX recording modes, the red light will be active for 5 seconds and then it will go off meaning the recording has successfully started.

- BLINKING RED LIGHT

When the device is connected to the charger and at the same time a recording mode has been selected the red light will blink during the recording process.

## ACCESSING THE STORED DATA - PLUG & PLAY

By simply attaching your audio recorder to the PC or laptop using the complimentary USB cable you will be able to open the folder containing audio files. Make sure your disk drive is set to FAT32 to be able to access the recordings.

## SETTING THE TIMESTAMP

Stored in a folder on the device itself you will find a program called Time Setup V2.2. You need to run it, select the Mode (Record Quality) to be HQ, SVOS Level +2, and you finally select Start. The program will generate the .cfg file that needs to stay in the folder on the device itself.

## SPECIAL NOTES

The device works with Windows operating systems only.

It is recommended to shut down the device every 14-15 days of usage and leave it off for approximately 24h.

It is strongly suggested to fully discharge the battery at least every 25-30 days.

After accessing the recordings on the PC or laptop it is recommended to safely remove the drive.