

**MRIYA 4G**  
PROFESSIONAL 4G AUDIO ALARM INTEGRATED IN 5V/2A TRAVEL ADAPTER



The device is intended for listening to conversations from a room over very long distances. The device operates on the principle of 4G GSM network, and for its normal operation it is necessary to ensure a normal SIM card. The location where the device will operate must be covered by a GSM signal (check with a regular cell phone).

Before inserting a SIM card into your device, you must deactivate the PIN number of that card depending on the type of cell phone, find the PIN DISABLE option in the menu or something similar - see the instructions for your cell phone.

Also, be sure that SIM card is activated, it needs to be able to make and receive voice calls, SMS messages, and need to have VOLTE function enabled

**INSERTING SIM CARD:**

1. Unscrew 4 screws ( picture 1) and carefully open lid
2. Insert a NANO SIM card with a PIN deactivated in the SIM card slot. In doing so, make sure that the card is inserted in the correct direction .

**INSTRUCTIONS FOR USING THE DEVICE:**

After SIM card is inserted , device will be automatically powered ON and work powered on internal backup battery.

Carefully close a lid and screw it back. Insert charger in 220V socket which will automatically charge internal battery when needed

The device has the security function of an administrator number. This means that if anyone other than the administrator dials this number, they will get busy line signal, they will not be able to access the device.

To activate your mobile number as an administrator number, send the following SMS from your mobile phone to the SIM card number on your device:

**admin123456 094123456**

where instead of **094123456** you will enter your mobile number

Wait for an SMS response from the device: admin ok



ADVANCED SURVEILLANCE SYSTEMS

Now you need to enable live listening function with SMS:

**monitor123456**

response is: monitor ok

You can now call the device's SIM card number from your admin number, and you will hear what's happening near the device.

**ACTIVATING ALARM FEATURES:** This model has the ability to alert you by SMS on admin number if it senses vibration . Activation and deactivation of this function is done by sending SMS messages of the following content.

Activation: **shock123456**, Deactivation: **noshock123456**

**GPS LOCATION OF THE DEVICE:**

The device has the ability to locate via GPS or LBS base stations ( if no GPS sattelites visible)

Location Request SMS:

**G123456#**

The device will return SMS with a link to google maps with GPS or LAC location, battery status, time and device serial number

**TECHNICAL SPECIFICATIONS :**

**DIMENSIONS:** 70x40x20 mm

**INPUT/OUTPUT:** 220V/5V-2A

**WEIGHT :** 50g

**Battery life when connected to 220V:** unlimited

**Battery life wen disconnected from 220V :** 4 days standby / 2 hours live call

**MICROPHONE:** Knowles SISONIC analouge mic

**ANTENNA:** 4G GSM integrated antenna

**SIM:** 4G NANO SIM card with VOLTE function enabled

**BANDS:** LTE- FDD: B1/B3/B5/B7/B8/B20

GSM: 900/1800Mhz